




Wire Instructions:

■ To activate the unit, extend the Red wire to a 12V post. Extend the black (-) wire to the ground post of the vehicle's battery.

+12/24 VDC

Ground

- Synchronization: To Sync two or more light heads together: Connect all the Yellow wires together.
- To select Flash Pattern, apply YELLOW to RED
 Less than 1 second for next pattern

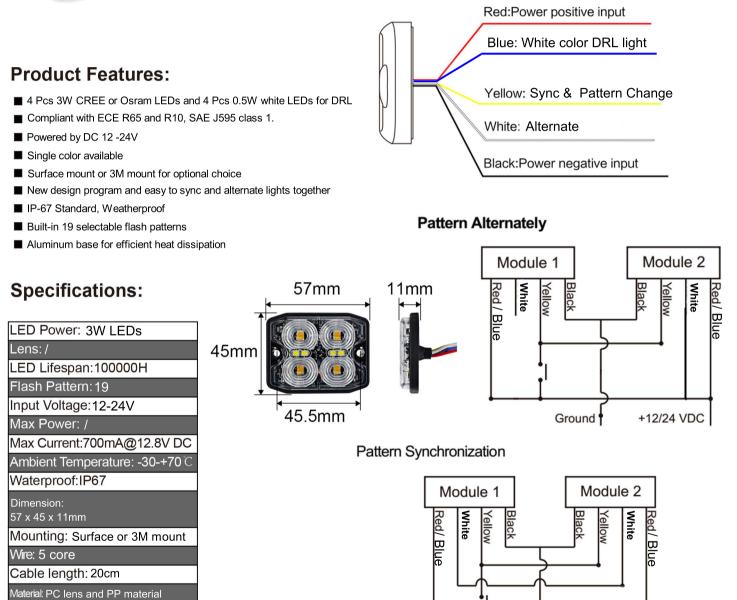

UNIT SIGNAL, INC.

www.unitsignal.com